


Section A-A

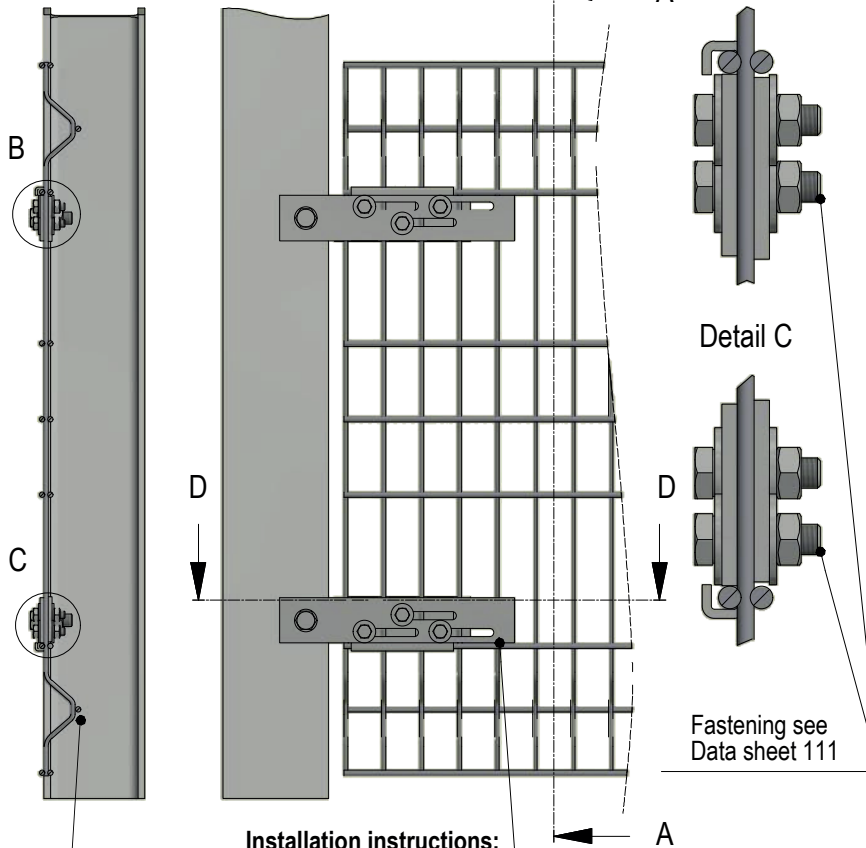

Installation instructions:
 The crest must always be installed starting in the first INTEGRA grid field, so that a max. slipping distance is achieved.

The beads can be oriented towards the parking deck or away from it.

Note:

An extended ramp flange is used when integrating in the ramp incline.

Technical data:

- INTEGRA-pw Fastening flange
- INTEGRA-pw crest
- INTEGRA-pw Counter flange

Tightening torque bolts:

- M10 = 30 Nm
- M16 = 100 Nm

Fastening see Data sheet 111



German Approval

Section D-D

